


Bowflag® Premium Surfer

ASSEMBLY HARDWARE

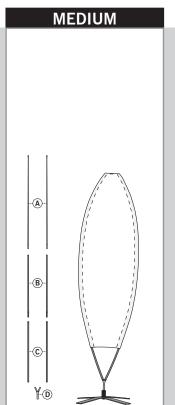

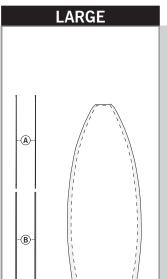

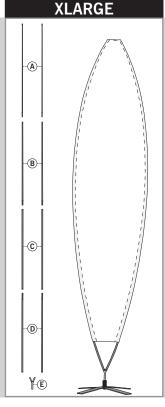

Medium:

A. (2) M3 – Tip

B. (2) M2 - No Interior Sleeve w/ Exterior Insert

C. (2) M1 - Interior Sleeve w/ No Exterior Insert

D. Y-Connector 50°

A. (2) L3/XL4 – Tip

B. (2) L2/XL3 – No Interior Sleeve w/ Exterior Insert

C. (2) L1 - Interior Sleeve w/ No Exterior Insert

D. Y-Connector 50°

XLarge:

A. (2) L3/XL4 - Tip

B. (2) L2/XL3 - No Interior Sleeve w/ Exterior Insert

C. (2) XL2 - No Interior Sleeve w/ No Exterior Insert

D. (2) XL1 - Interior Sleeve w/ Exterior Insert

E. Y-Connector 50°






Exterior Insert





ASSEMBLY

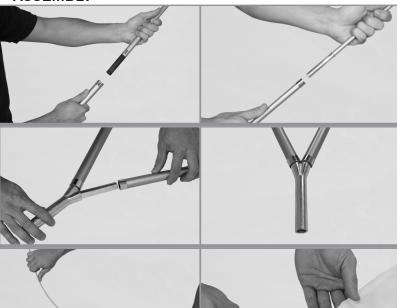

(C)

1. Assemble the two sets of poles, one for each pole sleeve. The poles are listed from top to bottom and are illustrated in the sketch above.

Medium - M3 (A), M2 (B), M1 (C)

Large - L3/XL4 (A), L2/XL3 (B), L1 (C)

XLarge - L3/XL4 (A), L2/XL3 (B), XL2 (C), XL1 (D)

2. Attach the bottom ends of each set of poles to the **Y-Connector 50^{\circ}** (D/E).

- 3. The pole tips are made to flex a little to give the print its shape. Insert one pole tip into one of the pole sleeves. Slightly curve the poles towards the second set of poles. Insert the pole tip of the second set of poles into the second pole sleeve.
- 4. Slide the print down both sets of poles until taut. Be sure that both pole tips are fully inserted into each pole sleeve.
- 5. Mount the display using one of the available bases.



