

## SINGLE ARM ASSEMBLY

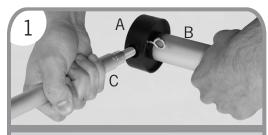

 Slide pole clips onto Aluminum Pole (B). Place the Black Pole Top (A) onto the top of Aluminum Pole (B). Screw Banner Arm (C) onto Black Pole Top (A).

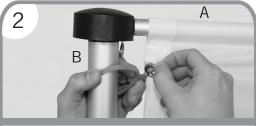

Slide the flag onto Banner Arm (A).
 Attach grommets to the pole clips around
 Aluminum Pole (B), except for the bottom grommet.




3. Extend Aluminum Pole (B) to the point until the Spring Buttons (D) lock.



Attach weight bag to bottom grommet.
Connect the bottom pole clip to the bottom grommet with the weight bag.



## **DOUBLE ARM ASSEMBLY**

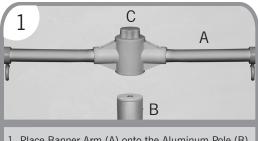

 Place Banner Arm (A) onto the Aluminum Pole (B).
 Using the supplied Screw (C), fix the Banner Arm
 (A) in place.




Attach flags to the Banner Arm Clips on the Banner Arm (A) and the Pole Clips on the Aluminum Pole (B).



3. Extend Aluminum Pole (B) to the point until the Spring Buttons (D) lock.




4. Fix Security Ring (E) to the hole in the Aluminum Pole (B) right above the bottom Pole Clips (this will prevent the flag from sliding up).

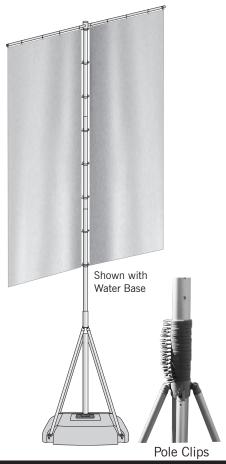






## PARALLEL ARM ASSEMBLY

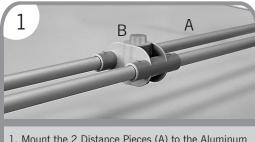

1. Mount the 2 Distance Pieces (A) to the Aluminum Pole's Upper Connecting Piece (B).

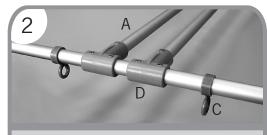

 Screw the Upper Banner Arms (C) with their pre-mounted Parallel Connectors (D) onto the ends of the Distance Pieces (A).




3. Remove 3 Banner Arm Clips from the Lower Banner Arms (B). Fit Lower Banner Arms (C) into the pole's Lower Connecting Piece (E) and put the removed Banner Arm Clips back on. At the Connecting Piece (E), fix the Lower Banner Arms (C) in a central position.




4. Attach flags to the Banner Arm Clips on both Upper and Lower Banner Arms (B). Extend Aluminum Pole to the point that the Spring Buttons (D) lock.



## TRIPLE ARM ASSEMBLY

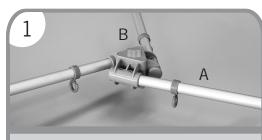

1. Screw three of the Banner Arms (A) into the Upper Connecting Piece (B).

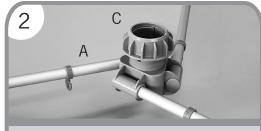

2. Screw the remaining three Banner Arms (A) into the Lower Connecting Piece (C).



3. Attach flags to the Banner Arm Clips on the Banner Arms and Pole Clips on the Aluminum Pole.



4. Extend Aluminum Pole to the point until the Spring Buttons (D) lock.







