


ASSEMBLY HARDWARE

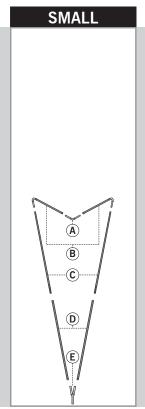

MEDIUM

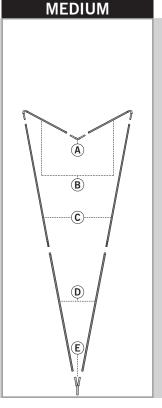

LARGE

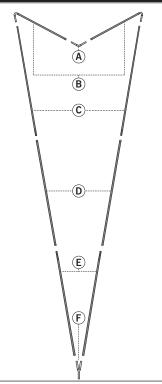

- A. Connector 120°
- B. (2) Top Pole S 50°
- C. (2) M2 No Interior Sleeve w/ Exterior Insert
- D. (2) M1 Interior Sleeve w/ No Exterior Insert
- E. Y-Connector 20°

Medium:

- A. Connector 120°
- B. (2) Top Pole M 50°
- C. (2) L2/XL3 No Interior Sleeve w/ Exterior Insert
- D. (2) L1 Interior Sleeve w/ No Exterior Insert
- E. Y-Connector 20°

Large:

- A. Connector 120°
- B. (2) Top Pole L 50°
- C. (2) L2/XL3 No Interior Sleeve w/ Exterior Insert
- D. (2) XL2 No Interior Sleeve w/ No Exterior Insert
- E. (2) XL1 Interior Sleeve w/ Exterior Insert
- F. Y-Connector 20°







Exterior Insert

Interior Sleeve

None

ASSEMBLY



- 1. Take one of the Top Pole S/M/L 50° (B) and insert into the left pole sleeve (straight end first). Slide the Top Pole S/M/L 50° (B) to the top of the print and situate the pole around the corner of the pole sleeve. Because of the tight angle of the corner, careful bunching and sliding of the pole sleeve will be required.
- 2. Insert the Connector 120° (A) into the right pole sleeve and connect it to the Top Pole S/M/L 50° (B).



3. Take the second Top Pole S/M/L 50° (B) and insert it into the right pole sleeve (straight end first). Slide the Top Pole S/M/L 50° (B) to the top of the print and situate the pole around the corner of the pole sleeve. Connect the Top Pole S/M/L 50° (B) to the Connector 120° (A).



4. Assemble two sets of bottom poles, one for each pole sleeve. The poles are listed from top to bottom and are illustrated in the sketch above.

Small - M2 (C), M1 (D) Medium - L2/XL3 (C), L1 (D)

Large - L2/XL3 (C), XL2 (D), XL1 (E)

- 5. Insert one set of bottom poles into the left pole sleeve and connect to Top Pole S/M/L 50° (B)
- 6. Repeat Step 5 with the second set of bottom poles and the right pole sleeve.
- 7. Attach the bottom poles to the Y-Connector 20° (E/F) and mount the display using one of the available bases.



